

VANESSENTIAL


VENTURE L-TRACK ON A FLAT SURFACE



CAUTION

If you're not comfortable installing this product yourself, we recommend contacting a local van builder for assistance with the install.

What's Included:

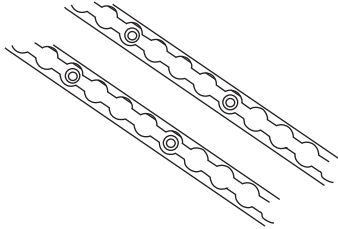

2x Lengths of track


You Will Need:




Drill




1/4 in and 5/16 in
Drill Bits

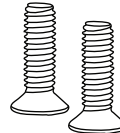

M6 Screws

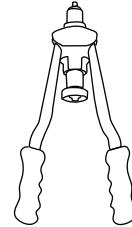

Rivnut Tool




M6 Rivnuts





Center Punch

Recommended profiles: Angled, Rectangle, Semi-Circle

1. Determine where you would like to install your L-Track. If needed, cut your track to size with an angle grinder or hacksaw and clean up the edges with a metal file.
2. When you have your track in the desired position, use a center punch to mark the center of a hole in the middle of the track. Then, use the hole as a guide to drill a hole with your 1/4 drill bit.

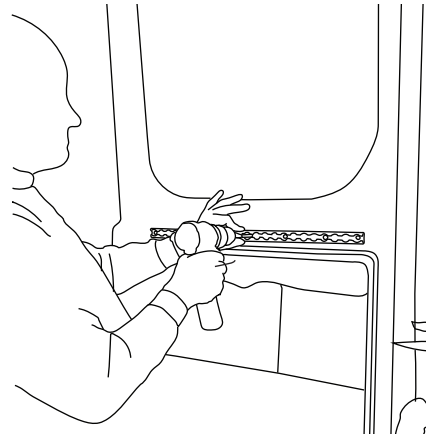


3. Remove the track, and drill into the hole you just made with a 5/16 bit. Refer to instructions from your rivnuts for size.
4. Using your rivnut tool, insert a M6 rivnut into the hole you just drilled.

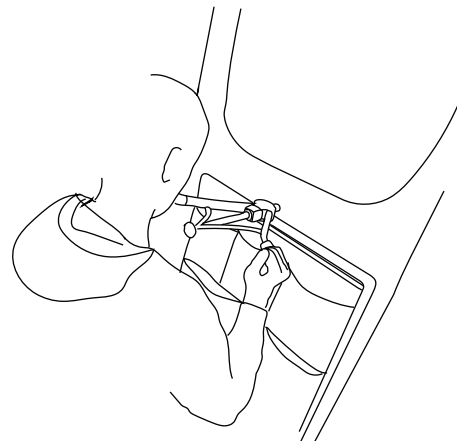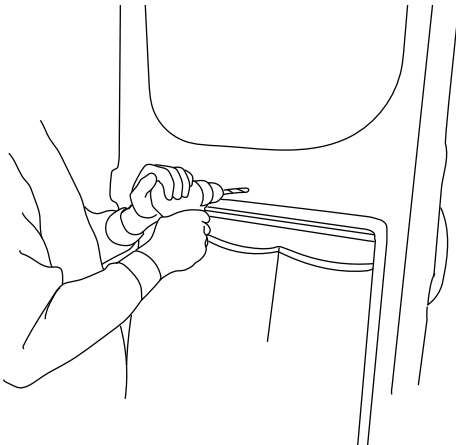


VENTURE L-TRACK


- 5.** With a M6 screw, secure your track into place at one point using the hole you just created.

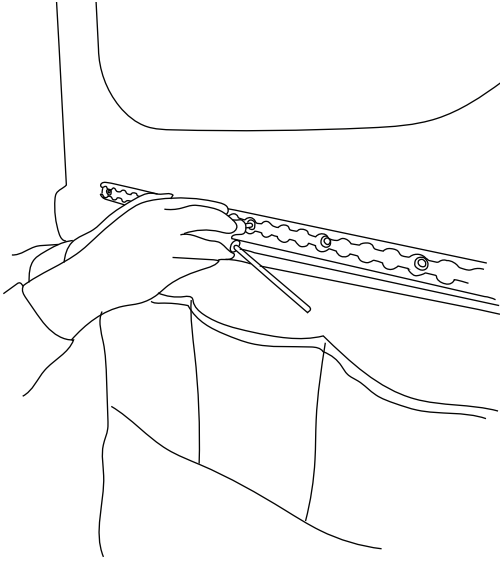

- 6.** Repeat steps 2-5 with another hole along your track. Ensure your track is aligned where you want it as you drill.

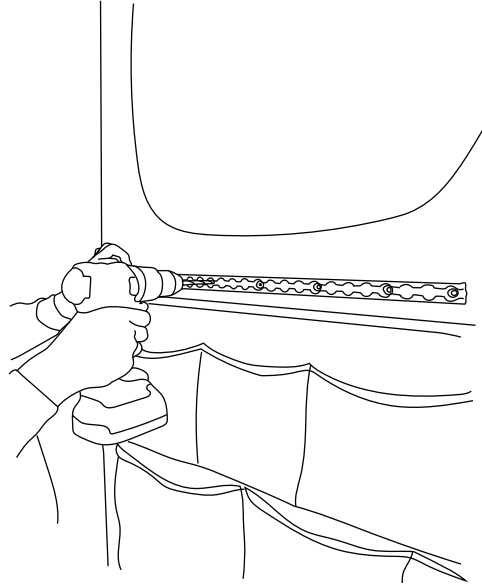

- 7.** Once you have two screws in place and your track is where you would like it, repeat steps 2-5 on the rest of the holes, using the holes as a guide.

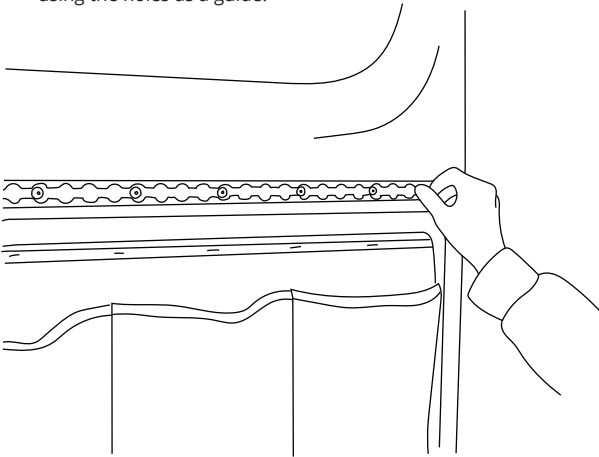

- 8.** Optional: Add end caps into place for a finished look and finish with a #6 screw.

